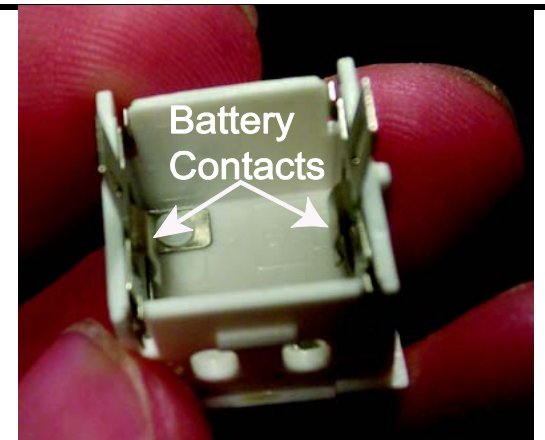
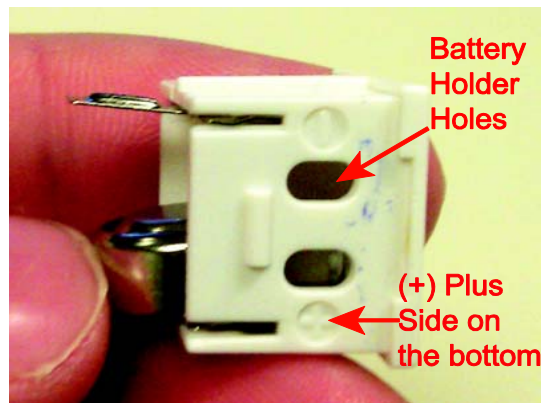
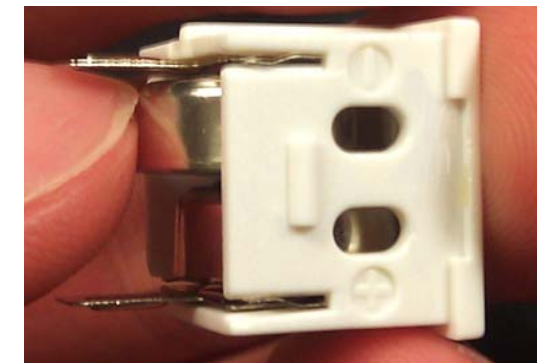


This WI is Applicable to the DT620 2-Outlet Digital Timer**DT620****Battery
Installation/Replacement****1** Unplug the DT620 from the outlet.**2** Use the end of a non-metallic object, such as a pen, to pry the battery holder open.**3** If you are replacing the batteries, pry loose the batteries with an end of a paperclip.**4** From inside the battery holder, slightly bend the battery contacts outward with a toothpick or small paperclip to increase tension on the new batteries.**5** With the prongs facing outward and the holes on the side of the holder facing you, insert a new battery (plus side down), into the battery holder (plus side on bottom).**6** Insert the other battery, plus side down, on top of the installed battery.**1****2****3****4****5****6**

Page

Revision

1 of 2

A

WI-000001Denotes any potential injury or damage to
the equipment

Denotes important check/inspection step

DT620

1**Battery
Installation/Replacement****7**

Insert the holder into the timer with the plus and minus indicators facing the electrical prongs on the timer.

7

Page

Revision

2 of 2

A

WI-000001

Denotes any potential injury or damage to the equipment



Denotes important check/inspection step